


WREN BIRD BRAND

INSTALLATION INSTRUCTIONS FOR SINGLE CYLINDER RIM NIGHT LATCH

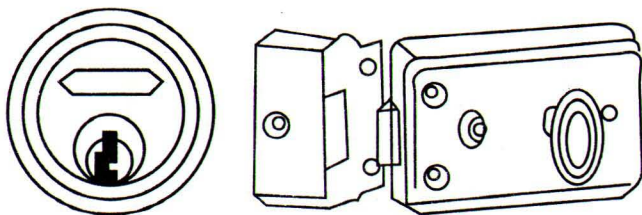

RANGE

The locks are suitable for various kinds of wooden doors between 35 - 55mm (thinner doors can be catered for with the addition wooden spacer).

OPERATION


From inside the nightlatch is operated by a thumb turn, from outside a key is used. The nightlatch features a snib function that deadlocks the latch-bolt preventing carding, prying and operation with the key.

FITTING INSTRUCTIONS

Choose the correct template according to the opening direction of the door either left or right hand opening and attach it on to the door. Bore a 30mm diameter hole 60mm in from the edge of the door. Put the cylinder into the cylinder ring then insert it into the door with the mark being uppermost. It may be necessary to cut the connecting-bar to suit thinner doors, ensure that the connecting bar enters the slot sufficient to operate the lock.

When installing the strike plate ensure it is at the same height and inline with the latch bolt so that the latch bolt will operate smoothly. Cut out the jamb to receive the front plate of the striker so that it will sit flush with the jamb. Fasten in place with the screws provided. If the door is outward opening the latch bolt can be reversed by opening the case, a suitable reverse strike plate may be required.


BASEPLATE

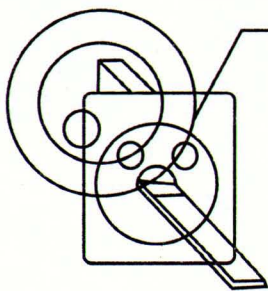

MAINTENANCE

Clean case with mild detergent, don't allow dirt to build up. Do not lubricate with oil use graphite powder to smooth key operation. periodically remove cover and add a little grease to the mechanism.

CONNECTING BAR HOLE

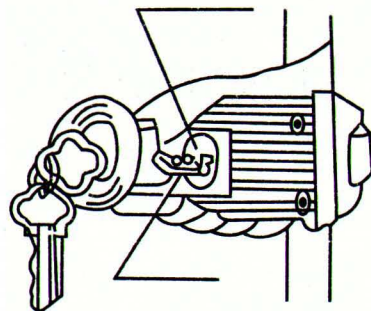

CONNECTING BAR

